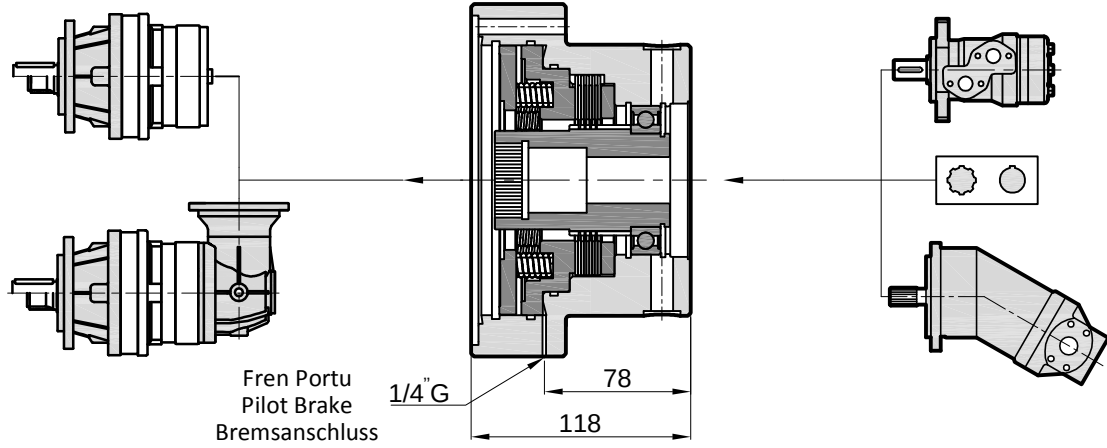


TR**FREN GİRİŞ
ADAPTÖRÜ****EN****INPUT ADAPTOR
WITH BRAKE****DE****EINGANGSADAPTER
MIT BREMSE**

BRA 100							
	T _B (Nm)	P _{Bmin} (bar)	Kod - Code - Bestell	P _{Bmax} (bar)	Yağ - Oil (lt)		Kg
					V1	B5	
BRA 110	110	11	2000.1-- .010	320	0.3	0.15	20
BRA 120	160	15	2000.1-- .020				
BRA 130	220	21	2000.1-- .030				
BRA 140	260	15	2000.1-- .040				
BRA 150	360	15	2000.1-- .050				
BRA 160	470	21	2000.1-- .060				
BRA 170	600	25	2000.1-- .070				

2000.1-- .010

Motor Mili
Motor Shaft
Antriebswelle

Aşağıdaki tablolar **BRA 100** fren direkt girişlerinin **PX,PXA** planet dişli redüktörler üzerine nasıl uygulanacağını göstermektedir.

The following tables show how to apply direct inputs **BRA 100** on **PX,PXA** planetary gear units.

Die nachfolgenden Tabellen zeigen, wie die Direkteingänge **BRA 100** auf **PX**, Planetengetriebe **PXA** aufgebracht werden.

	 BRA 100
PR 111 .	1 - 2 - 3 - 4
PR 113 .	1 - 2 - 3 - 4
PR 115 .	2 - 3 - 4
PR 117 .	2 - 3 - 4
PR 119 .	3 - 4
PR 121 .	3 - 4
PR 123 .	3 - 4
PR 125 .	4
PR 127 .	4
PR 129 .	4

	 BRA 100
PRA 111 .	2 - 3 - 4
PRA 113 .	2 - 3 - 4
PRA 115 .	2 - 3 - 4
PRA 117 .	2 - 3 - 4
PRA 119 .	2 - 3 - 4
PRA 121 .	3 - 4
PRA 123 .	3 - 4
PRA 125 .	4
PRA 127 .	4
PRA 129 .	4




FREN GİRİŞ ADAPTÖRÜ



INPUT ADAPTOR WITH BRAKE



EINGANGSADAPTER MIT BREMSE

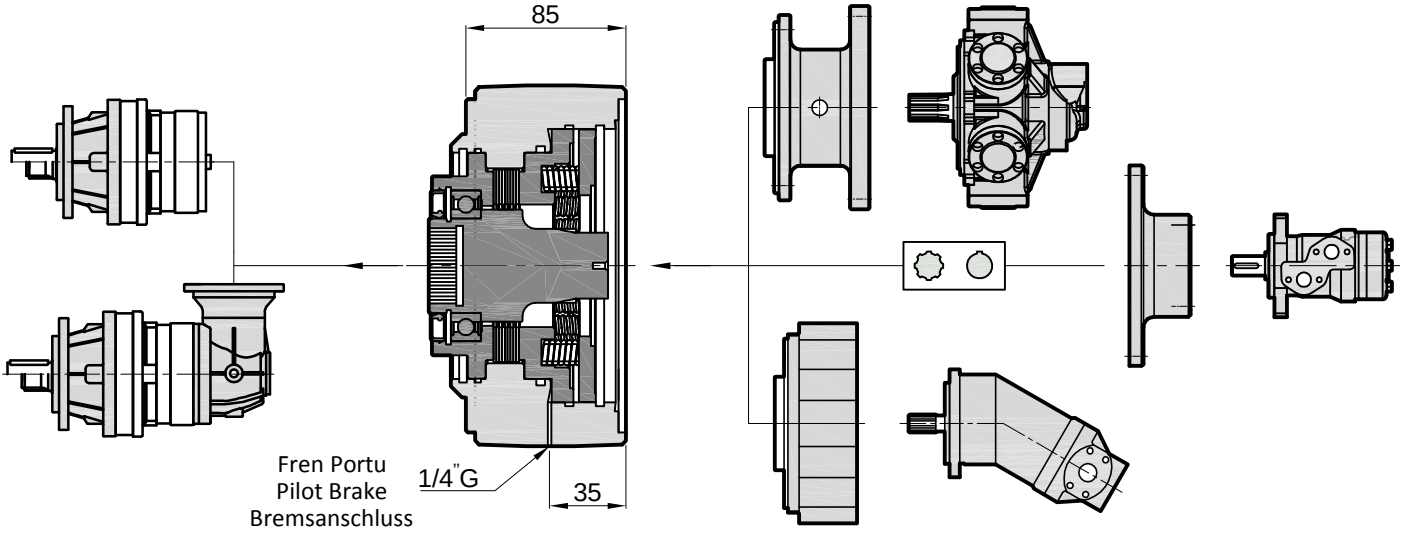

BR 100							
	T _B (Nm)	P _{Bmin} (bar)	Kod - Code - Bestell	P _{Bmax} (bar)	Yağ - Oil (lt)		Kg
					V1	B5	
BR 110	110	11	2000.200.010	320	0.3	0.15	20
BR 120	160	15	2000.200.020				
BR 130	220	21	2000.200.030				
BR 140	260	15	2000.200.040				
BR 150	360	15	2000.200.050				
BR 160	470	21	2000.200.060				
BR 170	600	25	2000.200.070				

Aşağıdaki tablolar **BRA 200** fren direkt girişlerinin **PX,PXA** planet dişli redüktörler üzerine nasıl uygulanacağını göstermektedir.

The following tables show how to apply direct inputs **BRA 200** on **PX,PXA** planetary gear units.

Die nachfolgenden Tabellen zeigen, wie die Direkteingänge **BRA 200** auf **PX**, Planetengetriebe **PXA** aufgebracht werden.

	
PR 111 .	1 - 2 - 3 - 4
PR 113 .	1 - 2 - 3 - 4
PR 115 .	2 - 3 - 4
PR 117 .	2 - 3 - 4
PR 119 .	3 - 4
PR 121 .	3 - 4
PR 123 .	3 - 4
PR 125 .	4
PR 127 .	4
PR 129 .	4

	
PRA 111 .	2 - 3 - 4
PRA 113 .	2 - 3 - 4
PRA 115 .	2 - 3 - 4
PRA 117 .	2 - 3 - 4
PRA 119 .	2 - 3 - 4
PRA 121 .	3 - 4
PRA 123 .	3 - 4
PRA 125 .	4
PRA 127 .	4
PRA 129 .	4




FREN GİRİŞ ADAPTÖRÜ



INPUT ADAPTOR WITH BRAKE



EINGANGSADAPTER MIT BREMSE

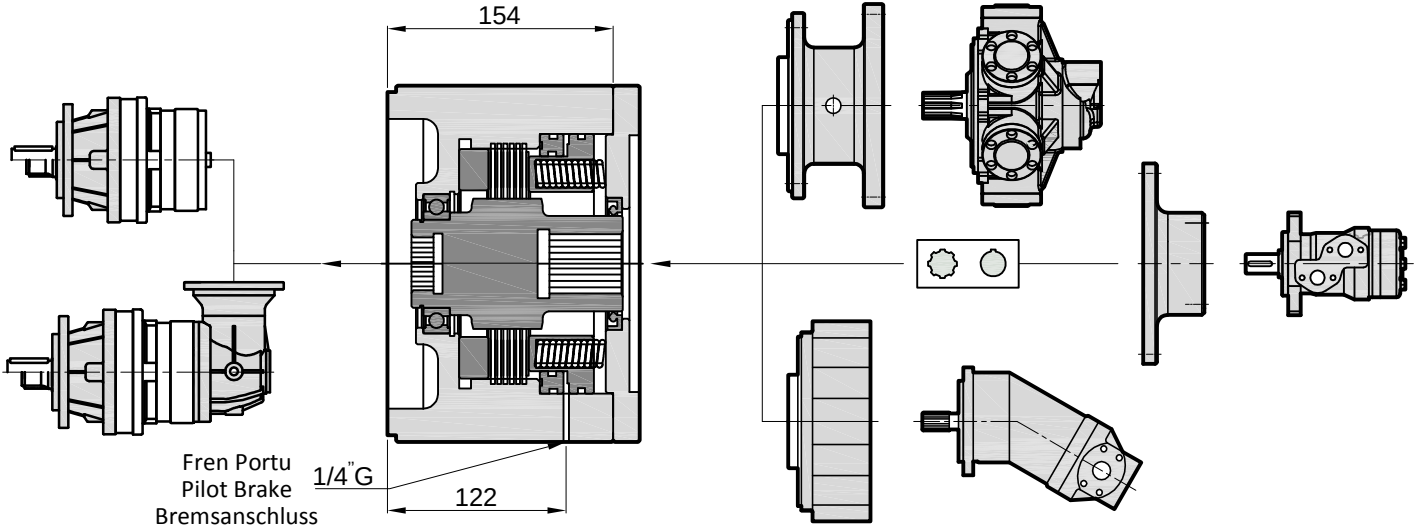

BR 200							
	T _B (Nm)	P _{Bmin} (bar)	Kod - Code - Bestell	P _{Bmax} (bar)	Yağ - Oil (lt)		Kg
					V1	B5	
BR 210	500	20	2000.2--.010	320	0.50	0.25	35
BR 220	600	20	2000.2--.020				
BR 230	700	28	2000.2--.030				
BR 240	800	28	2000.2--.040				
BR 250	900	30	2000.2--.050				
BR 260	1000	32	2000.2--.050				

2000.2--.010

Motor Mili
Motor Shaft
Antriebswelle

Aşağıdaki tablolar **BRA 300** fren direkt girişlerinin **PX,PXA** planet dişli redüktörler üzerine nasıl uygulanacağını göstermektedir.

The following tables show how to apply direct inputs **BRA 300** on **PX,PXA** planetary gear units.

Die nachfolgenden Tabellen zeigen, wie die Direkteingänge **BRA 300** auf **PX, Planetengetriebe PXA** aufgebracht werden.

	BR 200		BR 200
PR 115 .	1	PR 135 .	3 - 4
PR 117 .	1	PR 137 .	4
PR 119 .	1 - 2	PR 139 .	4
PR 121 .	1 - 2	PR 141 .	4
PR 123 .	1 - 2		
PR 125 .	2 - 3		
PR 127 .	2 - 3		
PR 129 .	2 - 3		
PR 131 .	3 - 4		
PR 133 .	3 - 4		

	BR 200
PR 115 .	2
PR 117 .	2
PR 119 .	2 - 3
PR 121 .	2 - 3
PR 123 .	2 - 3
PR 125 .	2 - 3
PR 127 .	2 - 3
PR 129 .	2 - 3
PR 131 .	3 - 4




FREN GİRİŞ ADAPTÖRÜ



INPUT ADAPTOR WITH BRAKE



EINGANGSADAPTER MIT BREMSE

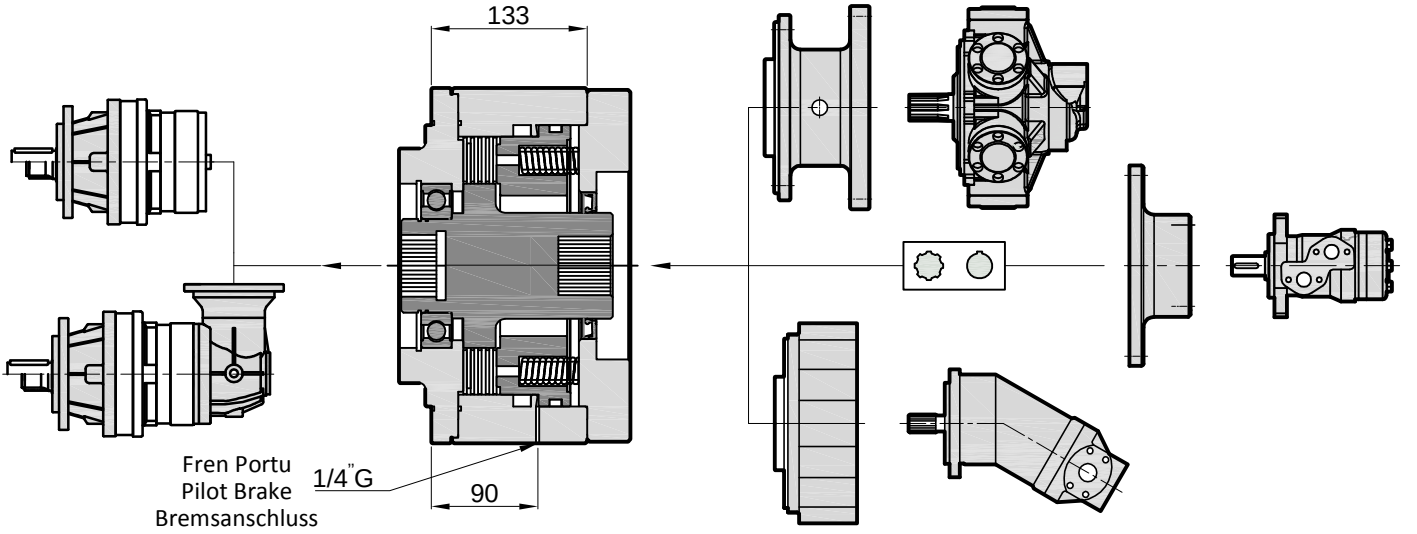

BR 300							
	T _B (Nm)	P _{Bmin} (bar)	Kod - Code - Bestell	P _{Bmax} (bar)	Yağ - Oil (lt)		Kg
					V1	B5	
BR 410	1250	15	2000.3--.010	320	0.75	0.4	60
BR 420	1500	17	2000.3--.020				
BR 430	1750	19	2000.3--.030				
BR 440	2200	15	2000.3--.040				
BR 450	2650	20	2000.3--.050				
BR 460	2900	20	2000.3--.050				
BR 470	3200	20	2000.3--.050				


2000.3--.010

Motor Mili
Motor Shaft
Antriebswelle

Aşağıdaki tablolar **BRA 400** fren direkt girişlerinin **PX,PXA** planet dişli redüktörler üzerine nasıl uygulanacağını göstermektedir.

The following tables show how to apply direct inputs **BRA 400** on **PX,PXA** planetary gear units.

Die nachfolgenden Tabellen zeigen, wie die Direkteingänge **BRA 400** auf **PX**, Planetengetriebe **PXA** aufgebracht werden.

	 BR 300
PR 121 .	1
PR 123 .	1
PR 125 .	1
PR 127 .	1 - 2
PR 129 .	1 - 2
PR 131 .	2 - 3
PR 133 .	2 - 3
PR 135 .	2 - 3
PR 137 .	2 - 3
PR 139 .	4

	 BR 300
PR 121 .	2
PR 123 .	2
PR 125 .	2
PR 127 .	2
PR 129 .	2
PR 131 .	2 - 3 - 4
PR 133 .	3 - 4
PR 135 .	3 - 4
PR 137 .	4